


Technique	Use of Ferrography to diagnose equipment problems and predict equipment failure before it occurs.
<div style="display: flex; align-items: center;">  <div> <h2 style="margin: 0;">Wear Particle Analysis Using Ferrography</h2> <p style="margin: 0;"><i>A cost-effective technique for detecting abnormal wear of lubricated components.</i></p> </div> </div>	
Benefit	Ferrography provides early detection of abnormal wear of the lubricated critical internal components of mechanical systems. Analyzes the debris in system lubricants. Shows particle size, shape and color as well as quantity. Reveals which system component is wearing, and to what degree, and pinpoints the cause of the wear.
Key Words	Predictive Maintenance, Wear Particle Analysis, Reduced Maintenance Cost.
Application Experience	KSC Payload Facility Crane Gear Reducers
Technical Rationale	Ferrography is a wear particle analysis utilizing diagnostic and predictive techniques to evaluate the on-line condition of interacting lubricated or fluid powered parts or components. The use of Ferrography to evaluate a system's condition is to avoid time-consuming and potentially damaging hardware teardown and other destructive or interfering inspections. Ferrography can analyze a system's fluid to determine the type of wear it is experiencing; and, hence, predict the type of system failure and when the failure may occur. Ferrography can provide an established and easily performed inspection method for determining the health of a system and providing an early failure detection method.
Contact Center	Kennedy Space Center (KSC)

Wear Particle Analysis Using Ferrography ***Technique AT-6***

Ferrography is a very useful and comprehensive analysis for trending and reporting. At a minimum, the user can obtain an analytical means of monitoring the wear condition; and, at the same time, accrue the necessary sample points required to establish a wear particle concentration baseline and retain the presence of non-magnetic particles for visual inspection and evaluation.

The advantage of Ferrography over other preventive maintenance systems is its capacity to detect a broader range of types and sizes (0.1-500 microns) of wear particles. A micron is 10^{-6} meters. Ferrographic analysis encompasses wear (metallic and non-metallic), contaminant (crystals, water, and organic and inorganic compounds), and lubricant (friction polymers) monitoring.

Typical wear problems identified by Ferrography; gear teeth wear through excessive load or speed, misalignments, fractures, rolling contact failure, water in the oil or poor lubricant condition, oil additive depletion, outside contaminants such as sand or dust, cam shaft and cylinder wall failure, oil filter failure. There are many others.

Industrial application of Ferrography entails the non-interruptive machine condition monitoring of heavily used lubricated mechanical systems. Hence, an operational baseline can easily be established by sampling every 50-500 hours of operation (approximately every one to three months, depending on system criticality), and used for quantitative trending analysis. Any anomalies in the wear particle concentration, especially in the generation rate of large

particles (>20 microns), is symptomatic of the onset of failure. For consistent results and accurate trending, lubricant samples are taken from the same places in the system each time. The method of sample extraction assures that the lubricant samples contain a representative selection of wear particles. The samples are then ferrographically analyzed both quantitatively and qualitatively.

The Direct Reading Ferrograph (DRIII) classifies metallic wear particles as either large (>20 microns) or small (<20 microns) and calculates the large to small wear concentration. These values are entered into the personal computer based Ferrotrend database, which compiles the data points for wear trending analysis. This process determines the existence of a malfunctioning component in the system.

The Dual Ferrograph Analyzer prepares the ferrogram (slide) for analysis through the Ferroscope IV Microscope. The qualitative analysis is documented in the Ferrogram Analysis Report Sheet which documents the severity concentration of specific normal and abnormal wear particles.

The ferromagnetic particles are sorted by gravity according to relative size, with larger particles appearing at the leading entry of the ferrogram. Non-magnetic particles (including contaminants and friction polymers) are distributed throughout the ferrogram. This process indicates the presence of contaminants, the condition of the lubricant, and the material composition of the abnormal wear particles being generated, from which the source of the wear may be deduced.

Ferrography is just one of the methods used at KSC. Ferrographic, viscosity, total acid

number and vibration analysis are cooperative elements of the predictive maintenance program.


References

1. GSE Health Trend Analysis - RT-ENG-2/90-218
2. P/PM Technology - March/April - 1991
3. Standard Oil Engineered Materials - Technical Bulletin 101
4. Predictive Maintenance Engineering Lab, USA/KSC.

Actual Photos

Description

Examples of Causes

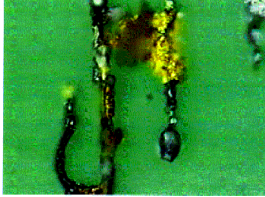

Long, curled strips
of metal

Normal Machine Wear


Cutting Wear



Small Spheres

Contamination or rolling
contact fatigue failure
(Bearings, cams, and
gears.)

Spherical Wear

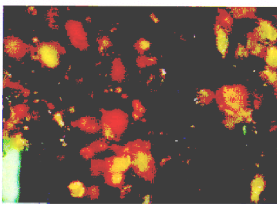


Red particles
aligned in
magnetic field

Water in the oil or
poor lubricant
condition

Red Oxide Particles

Actual Photos

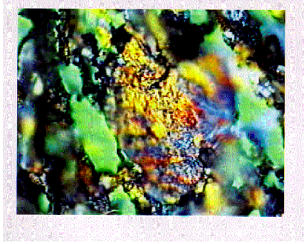


Description

Flat (1 micron thickness)
particle with
perforations

Examples of Causes

Rolling Contact
Fatigue


Bearing Wear

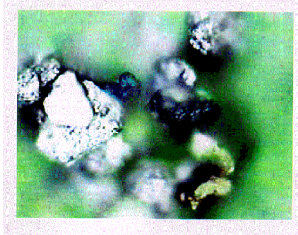

Nonferrous
particle, gray in
color with many
shear planes.

Solid lubricant
additive in system

Molybdenum Disulfide

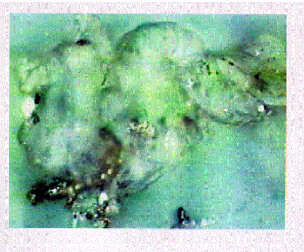

Amorphous
materials which
pass transmitted
light

Excessive load or
stress

Friction Polymers

This page intentionally blank